

# DEPARTAMENTO "SEGURIDAD OPERACIONAL" "SUBDEPARTAMENTO "LICENCIAS"

# "CIRRUS SR22" "CC-CWQ"

#### A.- OPERATING LIMITATIONS

### 1.- Limitations (Speed) (KIAS)

1 Lillitations (opecu) (NiAo)	
Va	133
Vne	201
Vno	178
Vfe 50%	119
Vs	73
Vso	62
Vx (SL)	<b>78</b>
Vy (SL)	101
Vr	70-73
Vapp (Flap DN)	80
Vglide	88
Max Cross Wind	20

# 2.- Fuel (U.S. GAL)

Type to Use	100/130
Total Capacity	94,5
Usable Capacity	92
Fuel Pressure (PSI)	
Minumum	0
Maximum	14

# 3.- Weight (LBS)

Maximum TAKE-OFF	3400
Maximum Baggage	130

# 4.- Engine (Maximum Continuous Power)

4.º Engine (Maximum Continuous i Owei)	
<b>Engine Operating Limitations</b>	
Reason HP o BHP	310
Maximum RPM	2700
Cylinder Head Temperature (°	<u> </u> F)
Maximum	460
Minumum	240
Oil Temperature (°F)	
Maximum	240
Minumum	75
Oil Pressure (PSI)	
Maximum	100
Minumum	10

# 5.- Maneuvering Limits (Normal Cat.)

Spin (Flaps UP)	PROHIBITED
Steep Turns	133
Lazy Eight	133
Chandelles	133

#### **B.- EMERGENCIES PROCEDURES**

#### 1.- ENGINE FAILURE DURING TAKEOFF RUN

Throttle Power Lever IDLE

Fuel Pump OFF

Mixture CUT OFF

Fuel Selector OFF

Ignition Switch OFF

Bat – Alt – Master Switch OFF

#### 2.- ENGINE FAILURE INMEDIATELY AFTER TAKEOFF

Airspeed ESTABLISH

Mixture CUT OFF

Fuel Selector OFF

Ignition Switch OFF

Flaps AS REQUIRED

**If Times Permits** 

Power Lever IDLE

Fuel Pump OFF

Bat Alt Master Switches OFF

Seat Belts ENSURE SECURED

#### 3.- ENGINE FAILURE DURING FLIGHT

Best Glide Speed ESTABLISH

Mixture AS REQUIRED

Fuel Selector SWITCH TANK

Fuel Pump BOOST

Alternate Induction Air ON

Ignition Switch CHECK BOTH

#### 4.- FIRE DURING START ON GROUND

Mixture CUT OFF

Fuel Pump OFF

Fuel Selector OFF

Power Lever FORWARD

Power Starter CRANK

If flames persist, perform emergency engine shutdown on ground and emergency ground egress checklists.

# 5.- ENGINE FIRE IN FLIGHT

Mixture CUT OFF

Fuel Pump OFF

Fuel Selector OFF

Airflow selector OFF

Power Lever IDLE

Ignition Switch OFF

Cabin Doors PARTIALLY OPEN

Land AS SOON AS POSSIBLE